
Swap workplace

1. open FEPA function `Master data > work plan > Swap workplace`
2. enter the old workplace number currently used in the work plan
3. enter the new workplace number that should replace the currently used workplace in the work plan
4. press the magnificent glass of the search and FEPA load all work plans in which the work place is used - with the mark you decide which work plan will changed (Yellow mark)
5. With the save button FEPA change all work plans an replace the work place.

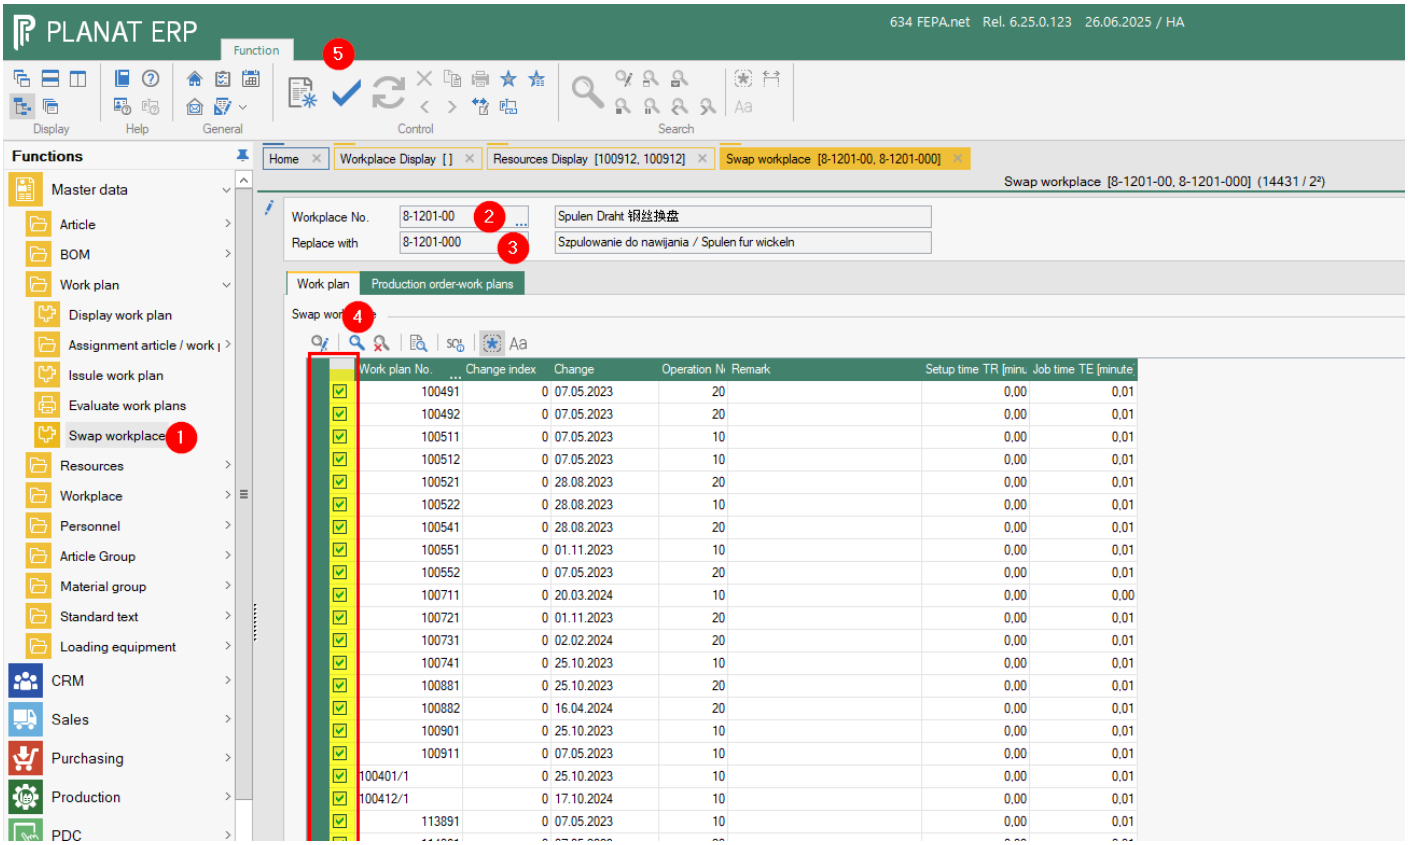

Revision #1
Created 26 June 2025 14:36:34 by Admin
Updated 26 June 2025 14:48:42 by Admin